



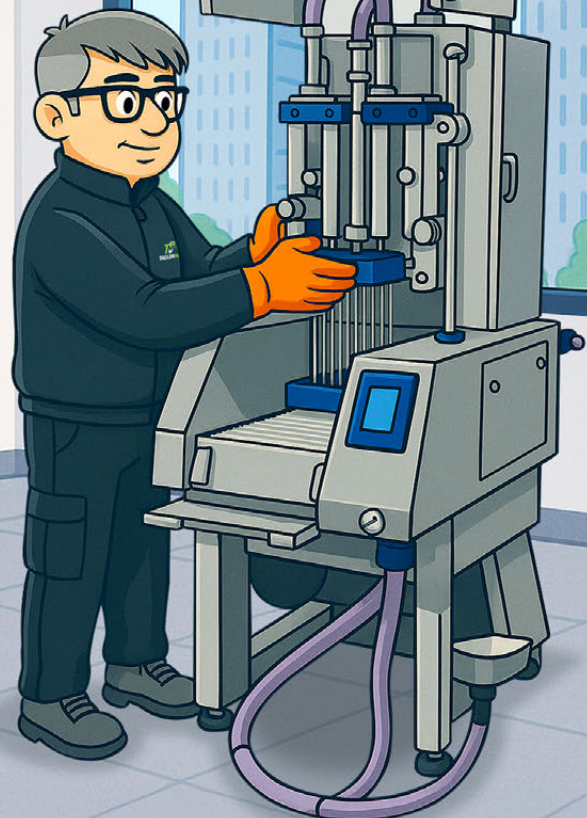




MAQUITO

MAQ ACADEMY: CLASS 5

DISASSEMBLY FOR CLEANING THE NEEDLE HEAD ON
THE PI-21 INJECTOR, GÜNTHER

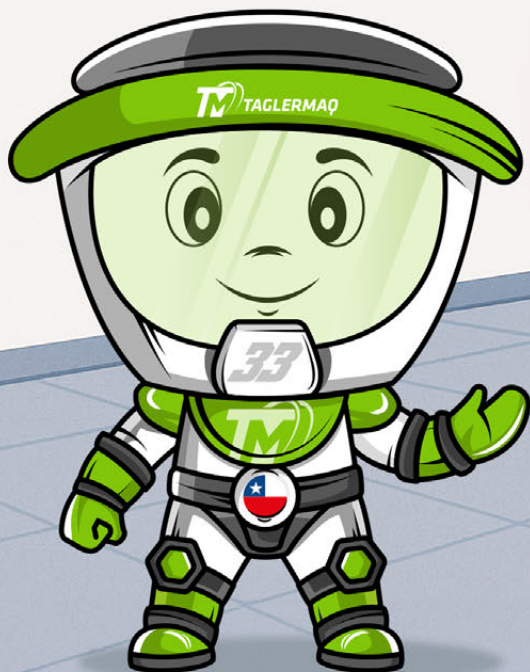


Technical Training — Intermediate Level at Taglermaq's offices, led by Maq, who guides our SAT Technician through the disassembly process for cleaning the needles on the Günther PI-21 Injector.

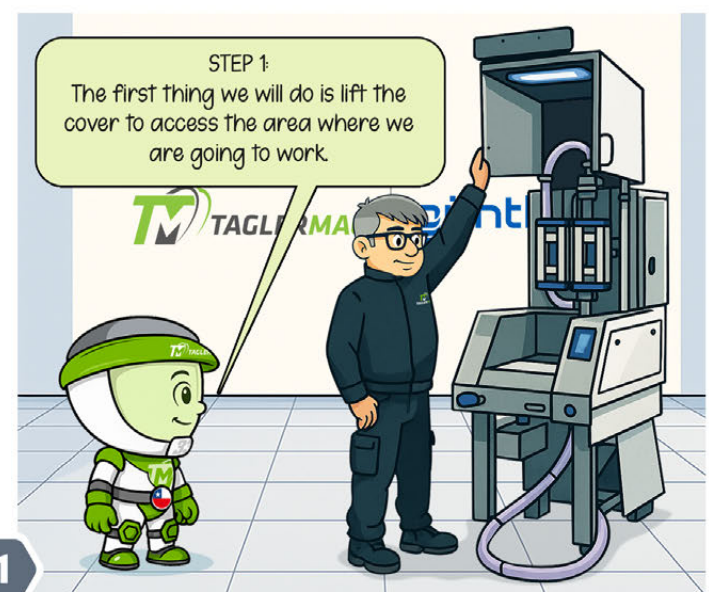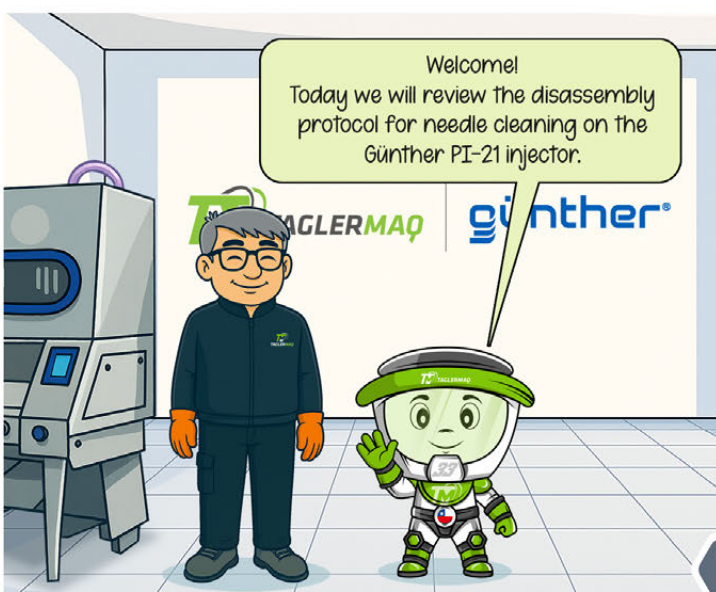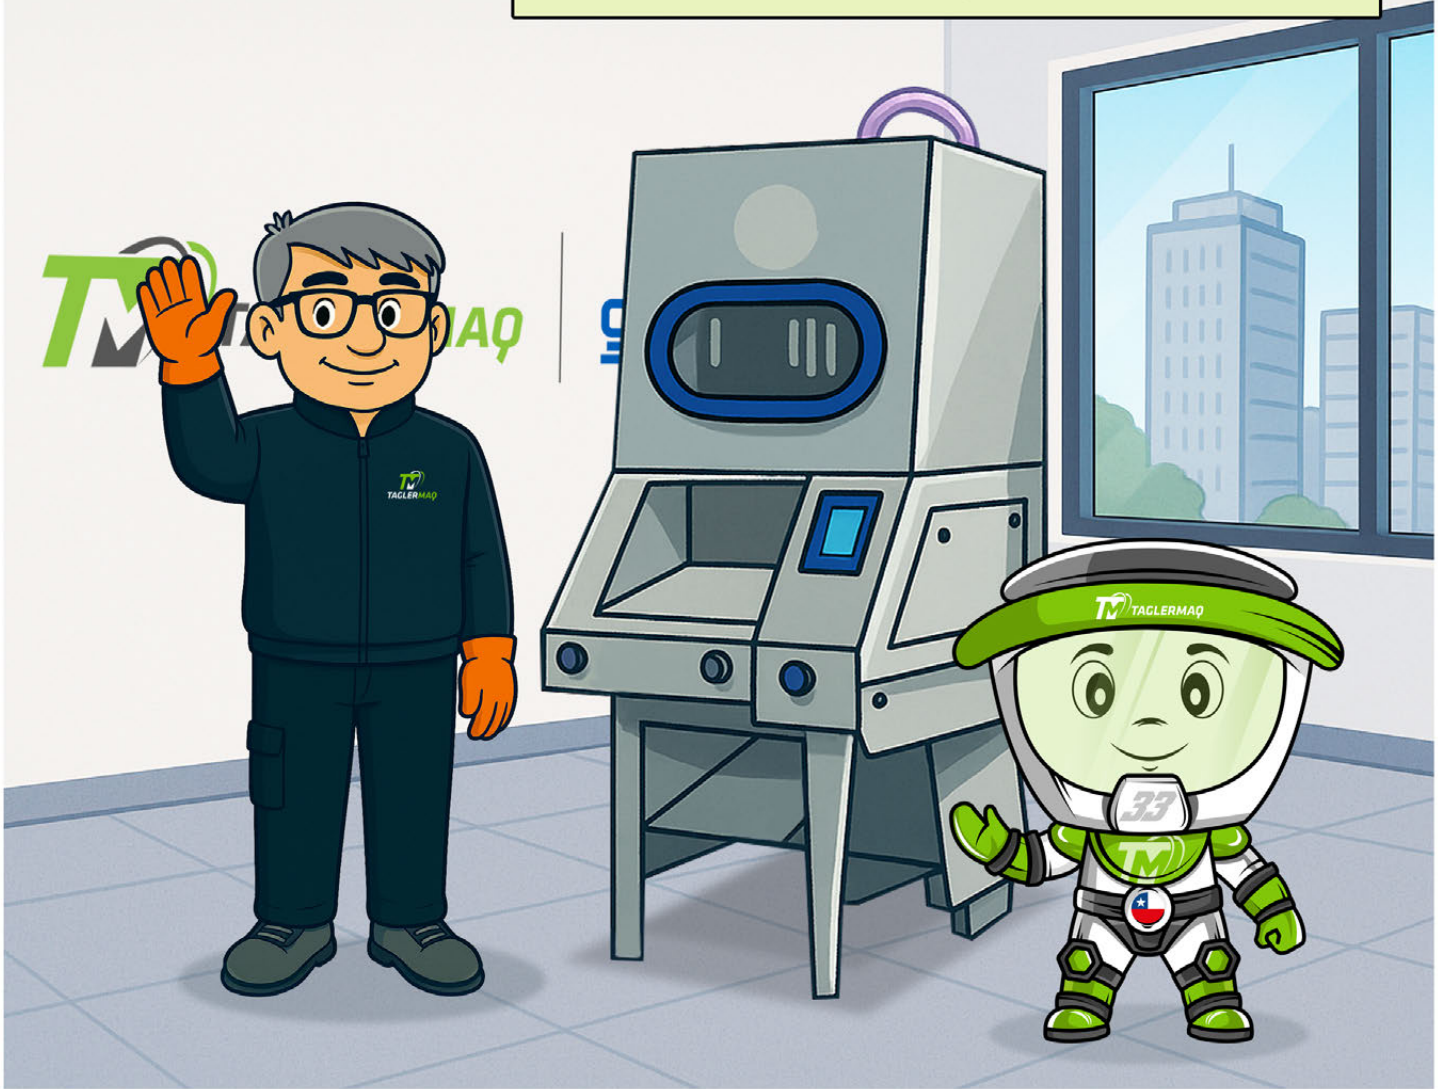



STEP 2:

Next, we will loosen the nut on the needle head. This will allow us to separate the other parts.

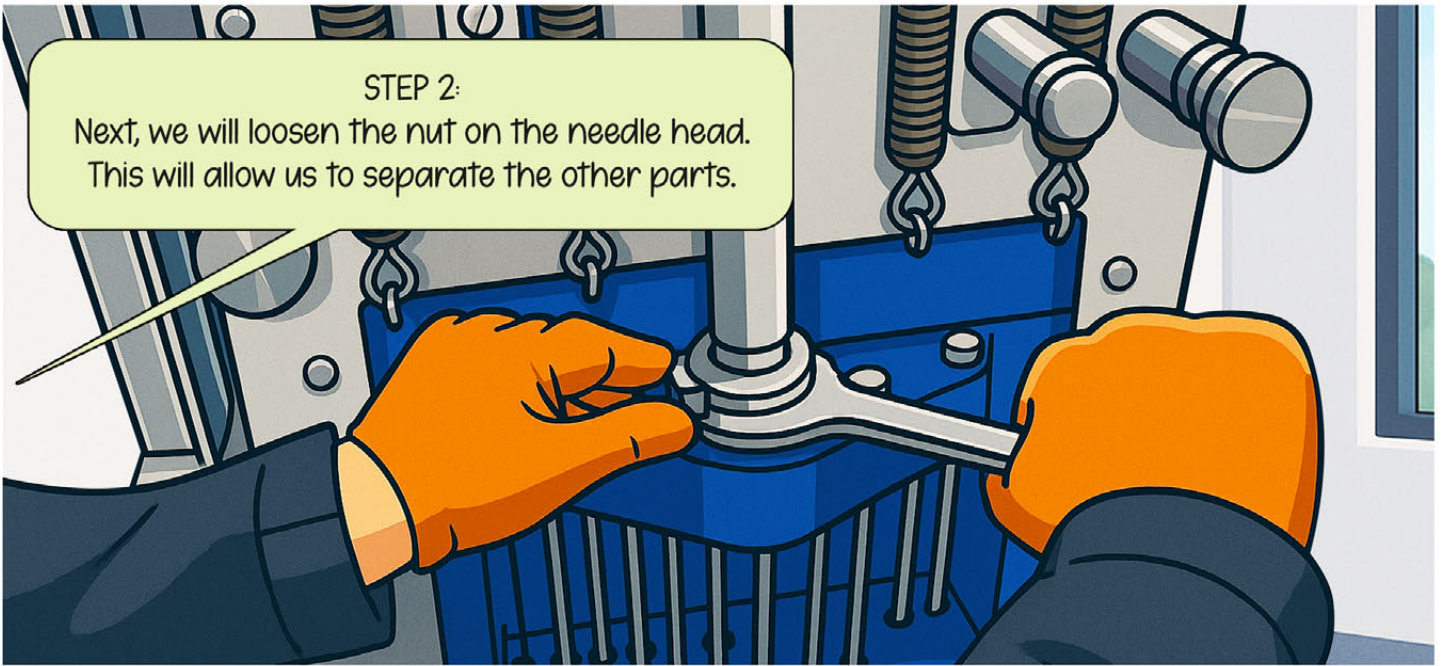

We will lift the brine tube and secure it on its support, in its extraction position.

TAĞLERMAQ günlü

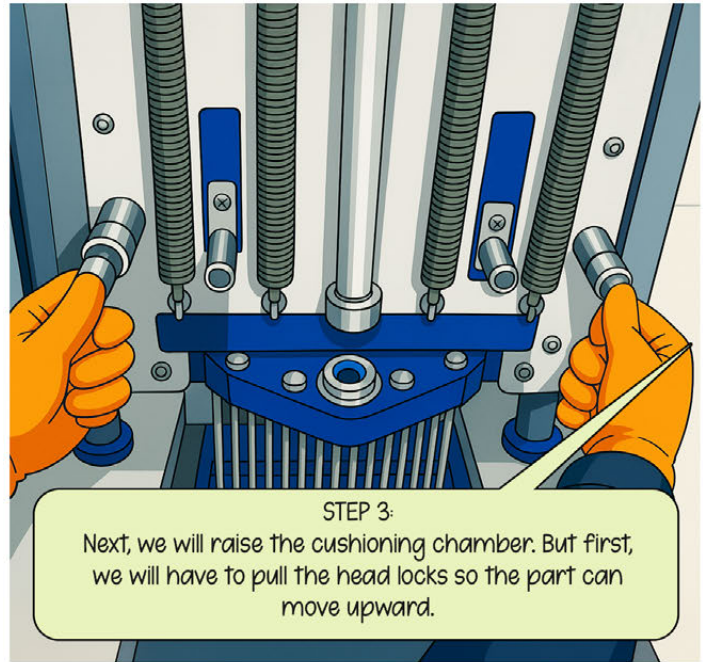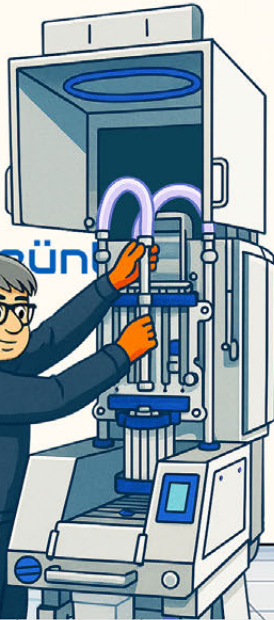

STEP 3:


Next, we will raise the cushioning chamber. But first, we will have to pull the head locks so the part can move upward.

We have to pull them outward and then turn them to lock the position. That way, the part will remain unlocked.

TAĞLERMAQ




günlü

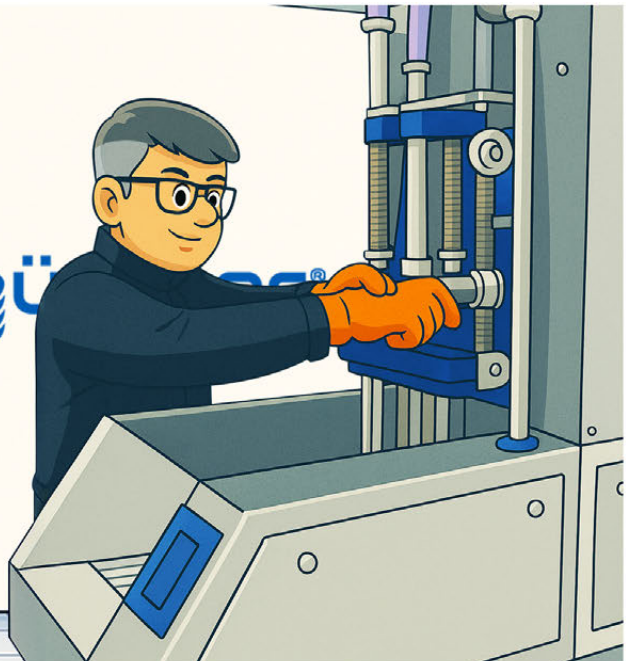


STEP 4:

Perfect! Once the previous step is completed, we will raise the cushioning chamber using both levers at the same time.

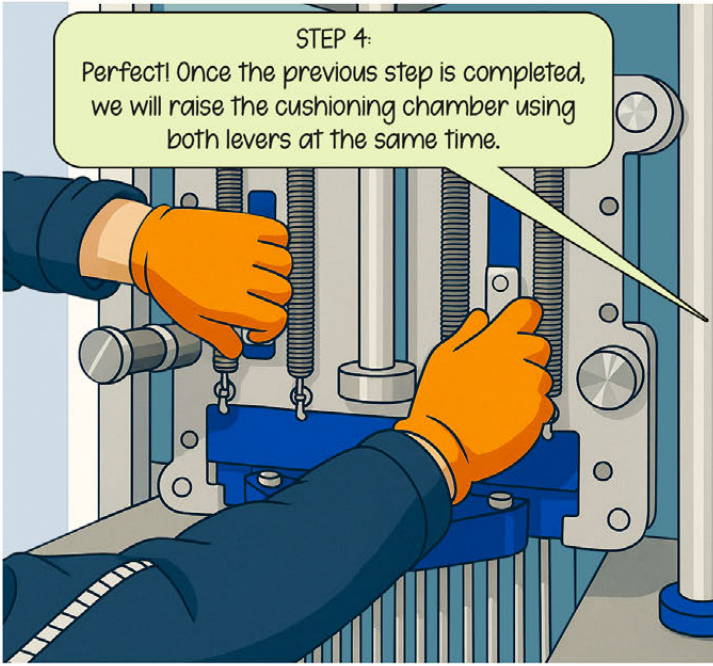


Important!

When the cushioning chamber is up, we must put the head locks back in place, otherwise it could fall.

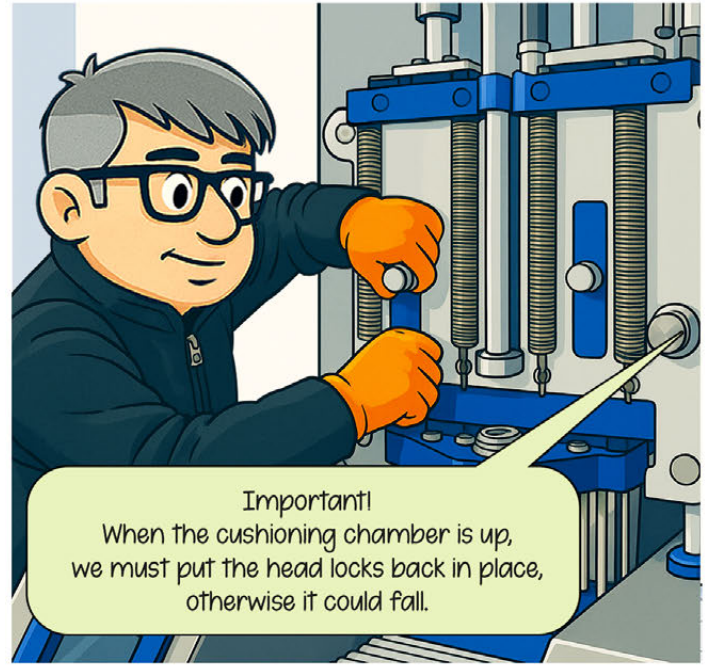


STEP 5:

To secure the locks, we must push them inward so the part no longer sticks out.

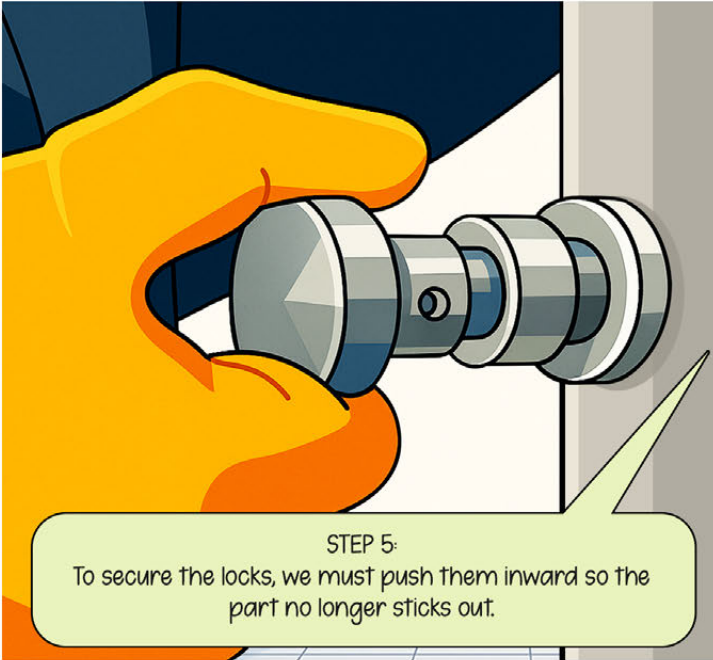


Very well!

Once that step is completed, we will disassemble the injector needle head for cleaning.

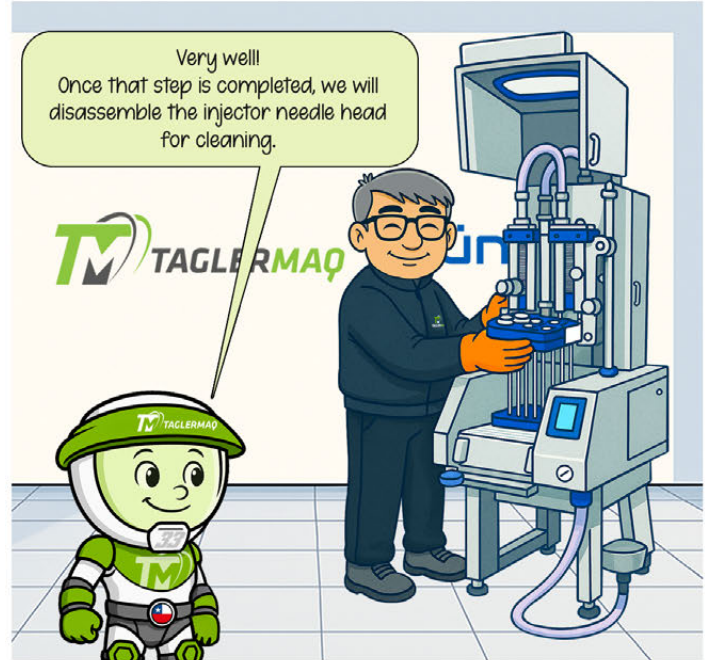

STEP 6:


After performing maintenance on the equipment, the procedure for reassembling the part is done in reverse order.

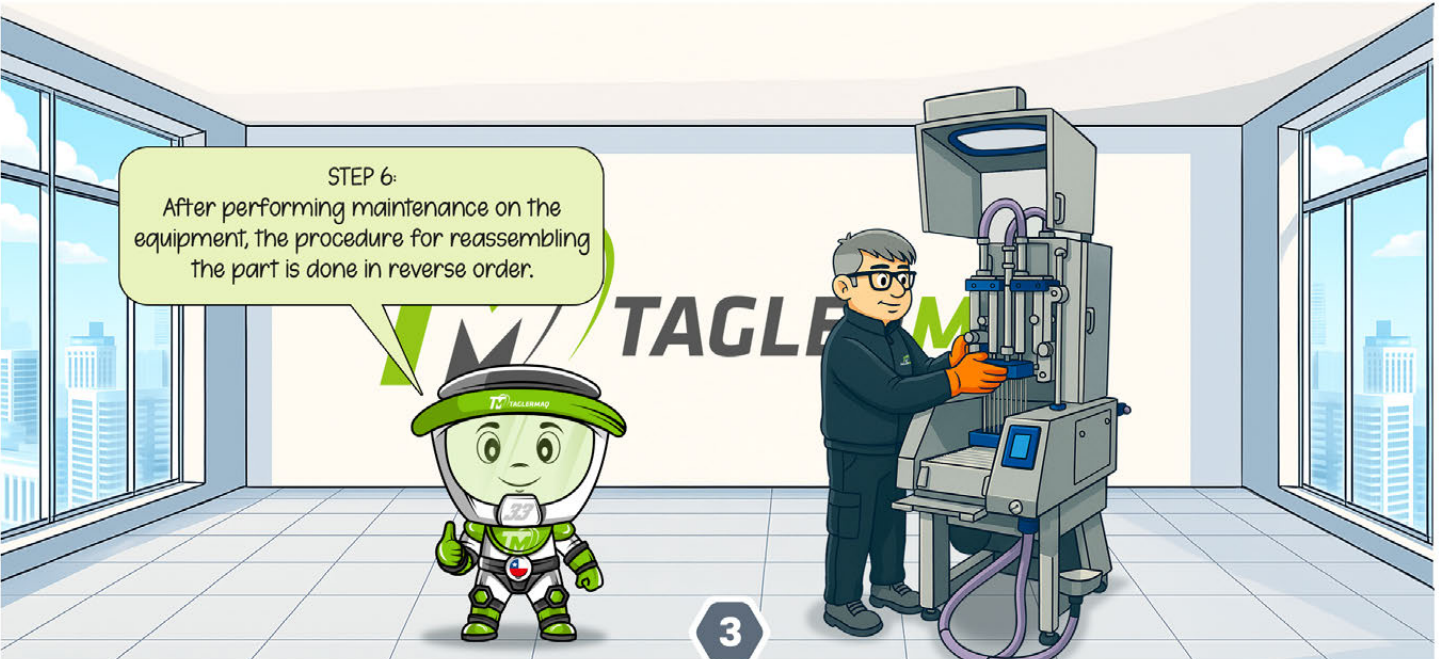




Performing timely maintenance on critical parts prevents damage from occurring in the machine.

We did a great job together, Maq!

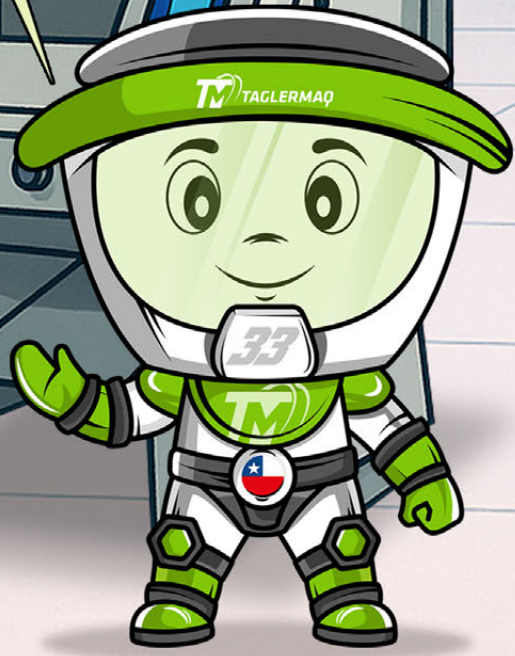

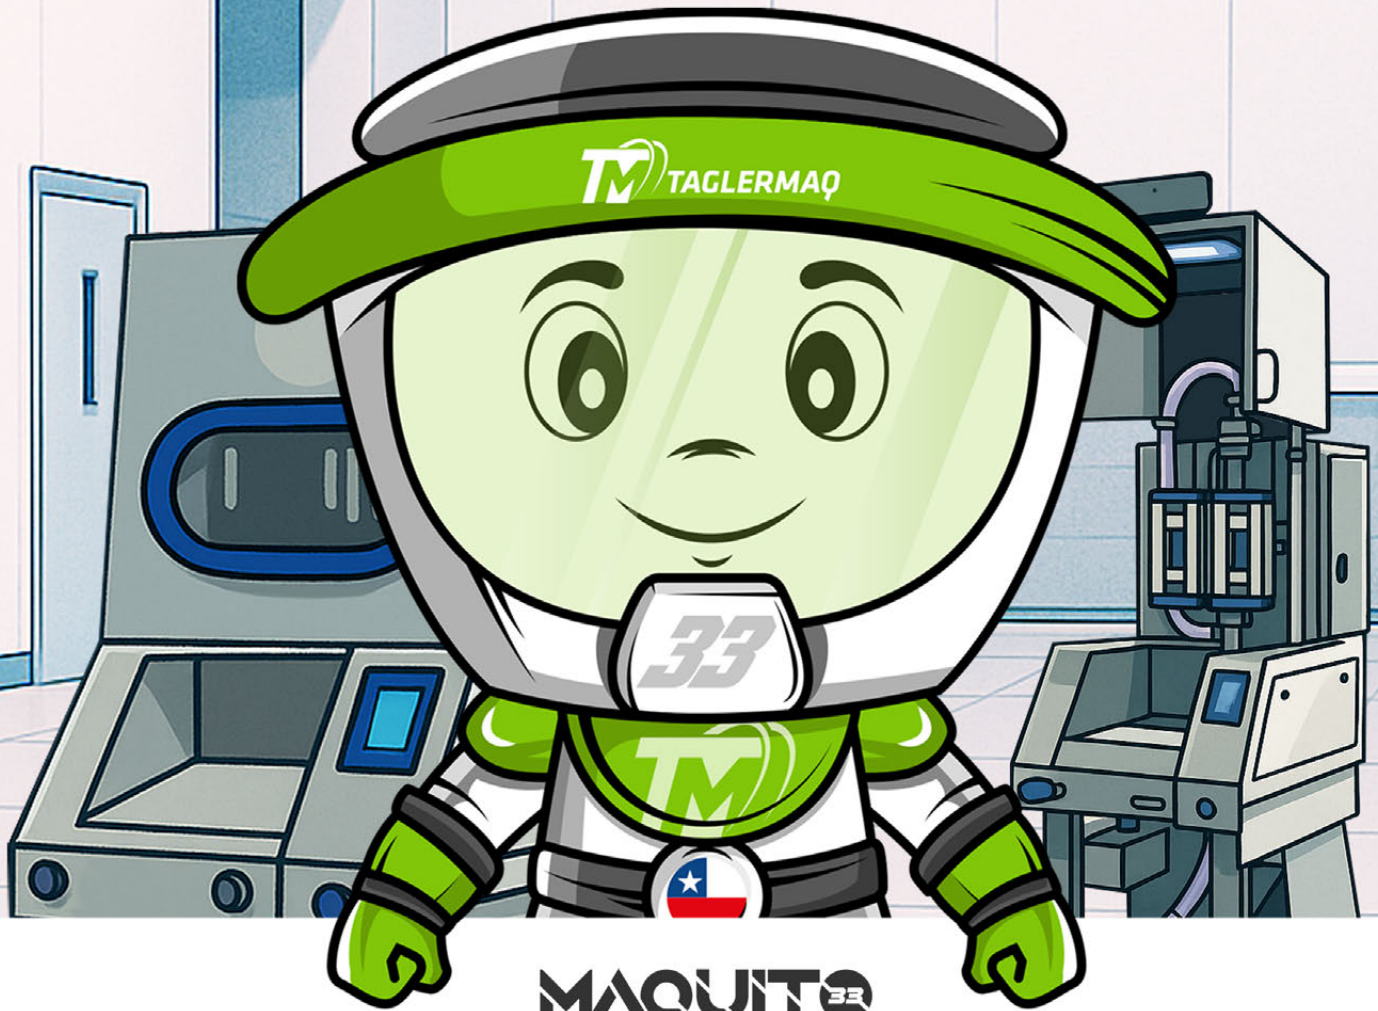

MAQUITO³³

MAQ ACADEMY: CLASS 5

DISASSEMBLY FOR CLEANING THE NEEDLE HEAD ON
THE PI-21 INJECTOR, GÜNTHER

IDEA AND SCRIPT

**TAGLERMAQ MARKETING DEPARTMENT
SAT TECHNICAL ASSISTANCE SERVICE**

DESIGN AND ILLUSTRATIONS
**TAGLERMAQ MARKETING DEPARTMENT
ARTIFICIAL INTELLIGENCE**

EDITION 6 · YEAR 2025



www.taglermaq.cl